



**ENTERTAINMENT & GAMING CENTER
CENTRE DIVERTISSEMENTS ET JEU
CENTRO DE JUEGO Y ENTRETENIMIENTO**

**SAVE THESE INSTRUCTIONS
CONSERVER CES INSTRUCTIONS
GUARDE ESTAS INSTRUCCIONES**



GHP50BL

**User Manual
Livre D'Instruction
Manual de Usuario**

**TV Not Included
TV Non Incluse
TV No Incluida**

Introduction

Thank you for purchasing our product. Please read the instructions in this manual carefully. Following and keeping these instructions will enable you to obtain optimal performance and listening enjoyment from this product.



Index

Parts Description Page 1

Grounding Instructions Page 2

Assembly Instructions Page 2

Options Page 5

Trouble Shooting Page 6

Rear Panel Controls Page 8

Controls Page 9

Specifications Page 10

Safety Warnings Page 11



Please check that you have all the below items before assembling the Entertainment and Gaming Center

1. Main consolex1
2. Subwoofer speakers.....x2
3. Tempered glass shelf.....x1
4. Digital display (Factory Installed)x1
5. Cleaning cloth.....x1
6. Shelf brackets.....x4
7. Subwoofer outletx2
8. Subwoofer contacts (Factory Installed)x2
9. Installation mounting openings.....x3
10. 5.1 Audio cable.....x1
11. 2.0 Audio cable.....x1
12. Speaker covers (Black mesh).....x6
13. Subwoofer speaker covers (Black mesh).....x2
14. Remote control.....x1

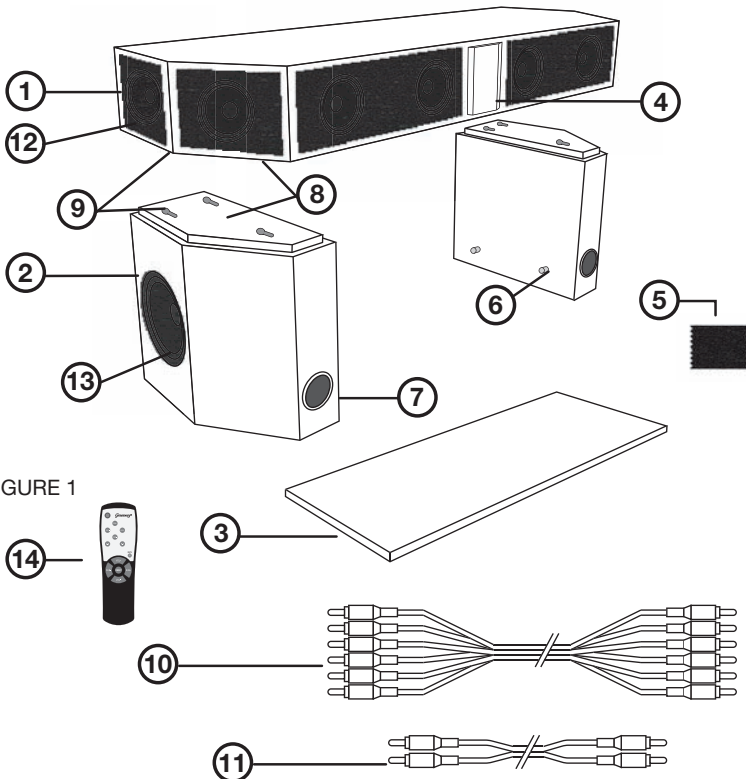


FIGURE 1

Grounding and Assembly Instructions

Warning: Improper use of the grounding plug can result in a risk of electric shock causing serious injury, even death.

This electronic device must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for electric current.

This electronic device is equipped with a power cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly grounded. Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the electronic device is properly grounded. If the wall outlet is a standard 2 prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

Do not under any circumstances cut or remove the third (ground) prong from the power cord.

Do not use an adapter plug with this electronic device.

Do not use an extension cord with this electronic device. If the power cord is too short, have a qualified electrician install an outlet near the electronic device.

Do not attempt to operate this electronic device if it has a damaged power cord or plug.

Assembly Instructions

Please retain all original packaging materials for future use in the event the Entertainment and Gaming Center requires any of the following: **Servicing or Replacement**

1. Place the left and right subwoofer speakers on the floor near to the location you will be installing your Entertainment and Gaming Center. The speakers need to face outward. Ensure you are also close to a power outlet. Leave sufficient room between the rear of the Entertainment & Gaming Center and any adjacent walls to accommodate easy installation of your audio/video equipment later on.

Position the subwoofer speakers approximately 30" (76cm) apart with the speakers facing outward. With the help of another person carefully lift and position the main console on top of the subwoofer speakers making sure the connecting pins located on the underside of the console are aligned with the matching key-hole openings (slots) located on top of the subwoofer speakers.

Lower the connecting pins into the key-hole openings and carefully slide the console forward until it comes to a complete stop. The main console should now be properly aligned with the subwoofer speakers.



WARNING: TO AVOID PERSONAL INJURY AND/OR EQUIPMENT DAMAGE, NEVER ATTEMPT TO LIFT THE FULLY ASSEMBLED ENTERTAINMENT CENTER COMPLETELY OFF THE GROUND, AS THE SUBWOOFER SPEAKERS MAY BECOME ACCIDENTALLY UNHOOKED AND FALL.

2. Carefully slide the glass shelf onto the 4 support pins located on the inside of the subwoofer speakers making sure the shelf is firmly positioned and level.
3. Remove the protective covers (usually grey) from the speakers located on the main console. Keep these covers for future use in the event the system has to be moved to another location.
4. Optional: Assemble the 6 mesh speaker covers by lining up the pins on the main console with the holes on the speaker cover gently pressing them into place.
5. Make sure all audio/video equipment is "disconnected" before connecting to the Entertainment & Gaming Center. Position your DVD player on the glass shelf. Connect one end of the 6 pin audio surround sound cables (included) to the 5.1 channel outputs on the DVD player, (consult DVD manual) and the other end to the 5.1 channel inputs on the Entertainment and Gaming Center. If your DVD player does not have 5.1 channel outputs, simply connect one end of the twin audio

Assembly Instructions

cables (included) to the “AUDIO OUT” channels on the DVD player and the other end to the 2.0 channel inputs on the Entertainment and Gaming Center.

5a. 5.1 Input Channels

FL = Front Left


FR = Front Right

SL = Side Left

SR = Side Right

C = Center

W = Subwoofer

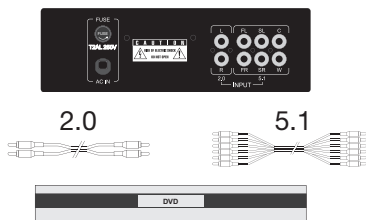


2.0 Input Channels


L = Left

R = Right

6. Connect the video cables (not included) from the component video outputs on your DVD player, (consult DVD manual) to the component video inputs on your TV set (consult TV manual). Check that all of your connections are secure

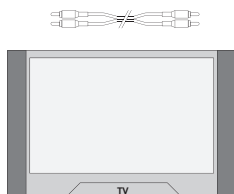

7. Plug in all of your audio/video equipment, you are now ready to turn the system on. Carefully slide the Entertainment and Gaming Center to the wall, (DO NOT LIFT) leaving a clearance of approximately 6” (15cm) behind the systems. This spacing is to allow for proper ventilation of all components.
8. The power (on/off) switch for the Entertainment and Gaming Center is located at the middle front edge on the underside of the main console.

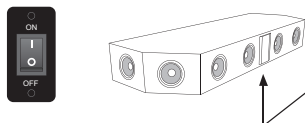


Gaming Console

If you are not utilizing the 2.0 channel inputs on your Entertainment and Gaming Center, you can connect a gaming console to these channel inputs for enhanced sound quality, using the twin audio cables (included).

Hand Held Gaming Systems

You can also connect hand held gaming systems to the Front Control Panel for enhanced sound quality, using the input channel marked "Game In" on the left side of the Front Control Panel.

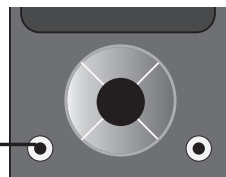

Game In on
Front Panel

MP3 Players

For ease, convenience and enhanced sound quality, you can connect your MP3 player to the input channel marked "MP3 In" located on the right side of the Front Control Panel. You can also connect your MP3 player to the 2.0 inputs (if not being utilized), located at the back of the Entertainment and Gaming Center, for 2.0 sound quality.



MP3 In on
Front Panel

NOTE: This will require a special audio cable inclusive of a 3.5mm mini RCA jack at one end (MP3 connection) and 2 regular stereo RCA jacks at the other end (Entertainment and Gaming Center connection) available at most electronic retail stores

Trouble Shooting

No Power

Check the power switch is turned to the ON position

Check the power cord is installed securely in the main console

Check the power cord is installed securely in the wall outlet

Check the wall outlet is active (breaker may be tripped/re-set)

Check the internal fuse located at the back of the main console, replace if necessary (use fuse specification F2AL250VP only)

Remote Control Not working

Check the condition of the batteries (if weak replace)

Check batteries are installed correctly (+/- polarity)

Make sure the path between the remote control and the (main console) infra-red receiver is not obstructed.

No Sound From DVD

Check that you have connected the DVD player correctly to the Entertainment & Gaming Center

Check that the DVD player is operational (outputting sound)

Check the DVD's owner's manual for correct 5.1 outputs

The LCD viewing screen must display 5.1 mode. If 2.0 mode is displayed in the viewing screen, 5.1 sound will not be heard.

Re-press the 5.1 channel button on the remote control

Likewise, if the 5.1 mode is visible in the LCD viewing screen, 2.0 sound will not be heard

Re-press the 2.0 channel button on the remote control

**No Sound From
2.0 Stereo Inputs**

If you are utilizing either of the Front Control Panel channel inputs (MP3-In/GAME-In), these connecting cable(s) must be disconnected to hear 2.0 sound, however, this does not apply to 5.1 sound listening

Check that you have connected the stereo (2.0) output channels correctly to the Gaming and Entertainment Center

Check the playing device is operational (outputting sound)

Check the owner's manual (electronic components) if you need to change output settings

**No sound from
the MP3 input**

Check that you have connected the MP3 output correctly

Check the MP3 is operational (outputting sound)

Check your MP3 owner's manual if you need to change the output settings

Re-press the 2.0 channel on the remote control

Rear Panel Controls

1. Power On/Off (Located at front of unit)
2. Fuse (Use type F2AL250VP ONLY)
3. Power cable
4. Input option
5. 5.1ch Input
6. 2.0 ch Input

FIGURE A

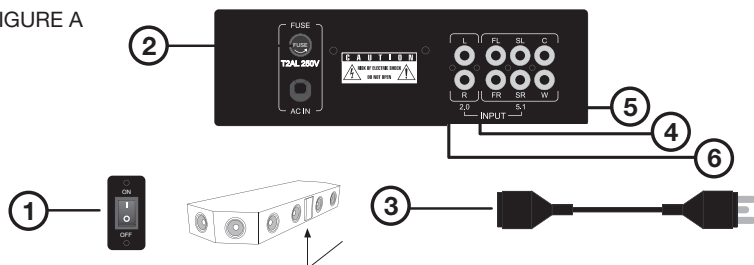


FIGURE B



FIGURE C

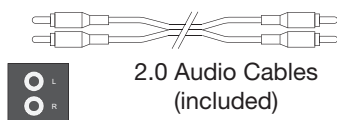


FIGURE D



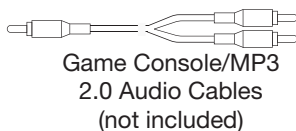


FIGURE E

 


Digital Display Control

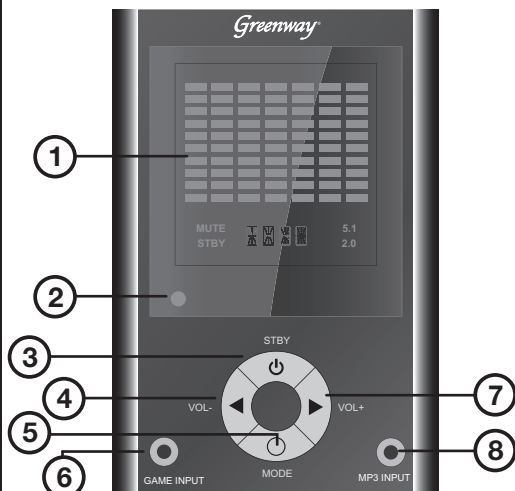

1. LCD screen
2. Receiver (Remote Control)
3. Standby (Power Button)
4. Volume down
5. Mode
6. Game input
7. Volume up
8. MP3 Input

Remote Control

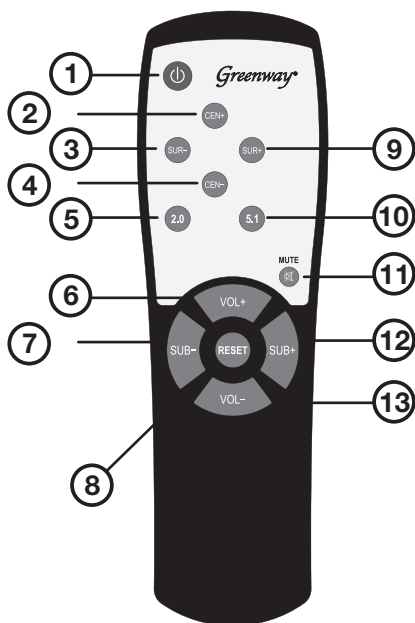

1. Power On/Off
2. Center up
3. Surround down
4. Center down
5. 2.0 ch. option
6. Volume up
7. Subwoofer down
8. Reset
9. Surround up
10. 5.1 ch. option
11. Mute
12. Subwoofer up
13. Volume down


Specifications

1. Output power

A - Center Speakers	18W x 2
B - Front Speakers	13W x 2
C - Side Speakers	13W x 4
D - Subwoofer Speakers	30W x 2


2. Frequency Response 25Hz-20KHz

3. Power Requirement 120V-60Hz

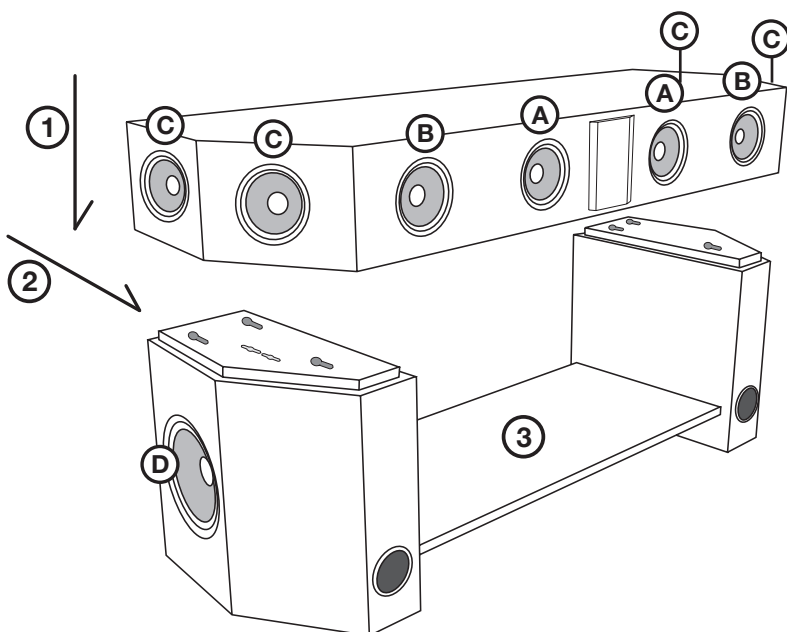


Safety Warnings


Leave 6" (15cm) for ventilation.

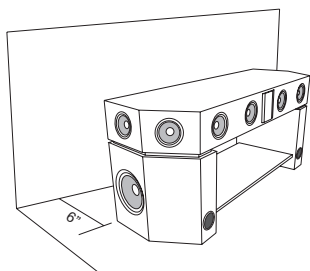


Do not block any ventilation openings.

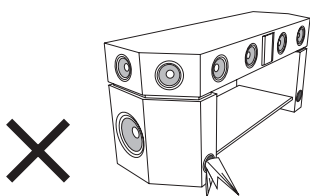


Do not open or repair unit yourself. Refer servicing to qualified personnel.

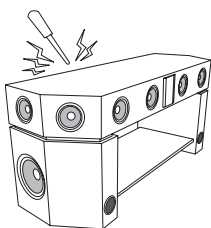


Do not position the unit near water, and clean only with a dry cloth provided.

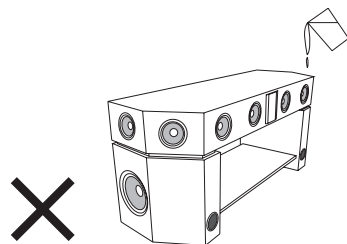

Do not climb or stand on the unit.

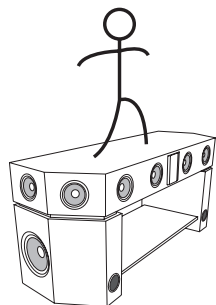

Pull out the plug if smoke, a peculiar smell or any strange noise comes out of the unit. And unplug this apparatus during lightning or when unused for long periods of time.

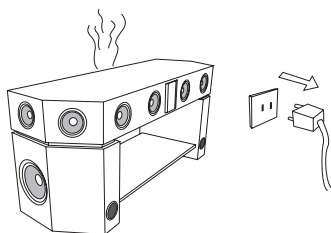

Introduction

Merci d'avoir acheté notre produit. Veuillez lire attentivement les instructions de ce manuel. Le fait d'observer et de conserver ces instructions vous permettra d'optimiser les performances de votre appareil et d'en profiter pleinement.



Index

Description des pièces	Page 13
Instructions de mise à la terre	Page 14
Instructions de montage	Page 14
Options	Page 17
Dépannage	Page 18
Panneau de commande arrière	Page 20
Commandes	Page 21
Spécifications	Page 22
Consignes de sécurité	Page 23

